



Standard Test Method for Free Water and Particulate Contamination in Middle Distillate Fuels (Clear and Bright Numerical Rating)¹

This standard is issued under the fixed designation D4860; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope*

1.1 This test method covers a rapid, portable means for field and laboratory use to inspect visually for particulate matter and numerically rate free water in aviation turbine and distillate fuels.

1.2 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard.

1.3 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.* For specific warning statements, see 11.2.3 and Annex A1.

2. Referenced Documents

2.1 ASTM Standards:²

[D1500 Test Method for ASTM Color of Petroleum Products \(ASTM Color Scale\)](#)

[D1744 Test Method for Water in Liquid Petroleum Products by Karl Fischer Reagent³](#)

[D2276 Test Method for Particulate Contaminant in Aviation Fuel by Line Sampling](#)

[D2709 Test Method for Water and Sediment in Middle Distillate Fuels by Centrifuge](#)

¹ This test method is under the jurisdiction of ASTM Committee D02 on Petroleum Products and Lubricants and is the direct responsibility of Subcommittee D02.14 on Stability and Cleanliness of Liquid Fuels. Stability and Cleanliness of Liquid Fuels.

Current edition approved July 1, 2008. Published August 2008. Originally approved in 1988. Last previous edition approved in 2007 as D4860-07. DOI: 10.1520/D4860-08.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

³ Withdrawn.

[D4057 Practice for Manual Sampling of Petroleum and Petroleum Products](#)

[D4176 Test Method for Free Water and Particulate Contamination in Distillate Fuels \(Visual Inspection Procedures\)](#)

3. Terminology

3.1 Definitions of Terms Specific to This Standard:

3.1.1 *clear-and-bright* (also termed *clean-and-bright*)—a condition in which the fuel contains no visible water drops or particulates and is free of haze or cloudiness.

3.1.2 *free water*—water in excess of that soluble in the fuel at the temperature of the test and appearing in the fuel as a haze or cloudiness, or as droplets.

3.1.3 *Micro-Separometer clear-and-bright (MSEP-C&B)*—a numerical rating indicating the presence and ease of removal of free water and particulate contamination by filtration.

3.1.4 *solid particulates*—small solid or semi-solid particles, sometimes referred to as silt or sediment, present in fuel as a result of contamination by air-blown dusts, corrosion by-products, fuel instability, or protective-coating deterioration.

4. Summary of Test Method

4.1 Visual inspection of the fuel sample for free water and particulate matter is performed immediately when the sample is taken. A glass container is used to view for water haze, and the fuel sample is swirled to create a vortex to detect the presence of particulate matter.

4.2 A numerical rating for free water is obtained by filtering a portion of the fuel sample at a programmed rate (50 mL/45 s) through a standard fiberglass coalescer/filter. A portion of the effluent is used to establish a reference (100) level by a light transmittance measurement. Another portion of the unprocessed (unfiltered) fuel sample is then compared to the 100 reference level. The results are reported on a 50 to 100 scale to the nearest whole number. A test can be performed in 5 to 10 min.

*A Summary of Changes section appears at the end of this standard.

NOTE 1—The standard fiberglass coalescer/filter consists of a precision-machined aluminum housing containing fiber-glass material that has been selected to specific air flow characteristics. These criteria have a direct bearing on the test results.

5. Significance and Use

5.1 The test provides a field test to evaluate visually a fuel sample for particulate matter and free water similar to Test Method **D4176** plus a numerical rating for free water. High numerical ratings indicate that the fuel is relatively free of free water. The degree of water and particulate contamination can be measured using other methods such as Test Methods **D1744**, **D2276**, and **D2709**.

5.2 The color of the sample does not affect the measurement. Limited laboratory evaluations of samples have determined the degree of free water can be rated in fuels with dark opaque color having a darker rating than five in Test Method **D1500**.

6. Interferences

6.1 When a fuel is visually inspected at or below the cloud point temperature of the fuel, small amounts of solid wax particles can be confused with a water-induced haze or cloudiness.

6.2 The presence of free water or particulate can be obscured and missed during visual inspection of the fuel, if the ASTM color rating is greater than five.

7. Apparatus

7.1 *Micro-Separometer Instrument, Mark V Deluxe or Mark X*.⁴

7.1.1 The Micro-Separometer is a completely portable and self contained unit capable of operating on an internal rechargeable battery pack (optional) or being connected to an ac power source using power cords that are furnished for various voltages. Connection to an ac power source provides power to the unit and effects battery recharge. The accessories as well as the expendable materials for six tests can be packed in the cover of the lockable case.

7.1.1.1 The Micro-Separometer Mark V Deluxe model and associated control panel are shown in **Fig. 1**.

7.1.1.2 The Micro-Separometer Mark X model and associated control panel are shown in **Fig. 2**.

NOTE 2—An extensive study was performed to verify that the Mark X Micro-Separometer gives equivalent results to the Mark V Deluxe Micro-Separometer. See Research Report D02-1647.⁵

7.1.2 The emulsifier is on the right side of the raised panel and the syringe drive mechanism is on the left side. The control panel containing the operating controls is mounted on the fixed panel in the left side of the case.

⁴ The sole source of supply of the apparatus (Model 1140 Micro-Separometer, Mark V Deluxe and Mark X) known to the committee at this time is EMCEE Electronics, Inc., 520 Cypress Ave., Venice, FL 34285 www.emcee-electronics.com. If you are aware of alternative suppliers, please provide this information to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee,¹ which you may attend.

⁵ Supporting data have been filed at ASTM International Headquarters and may be obtained by requesting Research Report D02-1647.

7.1.3 All of the controls are located in a push-button array on the control panel. The push buttons illuminate when depressed, thus indicating operational status. A circuit breaker located on the control panel provides protection for the ac power circuit.

7.1.4 By depressing the *ON* push button, the electronic circuits are energized. The *ON* push button light pulses on and off when the instrument is being operated by an ac source and constantly remains on when the battery (dc) pack is used. The push buttons sequentially illuminate on and off indicating *ready* operational status.

NOTE 3—For the Mark V Deluxe—Of the lettered (*A-G*) push buttons, only the *C* push button is applicable to this test method.

For the Mark X—Only test mode Clear/Bright is applicable to this test method.

7.1.5 The *RESET* push button can be depressed at any time to cancel the test in progress and restore the program to the initial start mode. The lettered push buttons commence to illuminate sequentially, thus indicating a *ready* operational status enabling test mode selection.

7.1.6 Test mode selection is accomplished by depressing the applicable push button—letter (*C*) on the Mark V and *CLEAR/BRIGHT* on the Mark X. The depressed push button illuminates and the sequential illumination of the other lettered push buttons ceases. The *START* push button on the Mark V and the *RUN* push button on the Mark X also illuminate and the syringe drive mechanism moves to the *UP* position.

7.1.7 The automatic program for the Clear/Bright test is initiated by depressing the *START* push button on the Mark V and the *RUN* push button on the Mark X.

7.1.8 The turbidimeter is located under the main control panel and consists of a well in which the sample vial is placed, a light source, and a photocell. A mark on the panel in front of the turbidimeter well is used to align the sample vial.

7.1.9 By depressing the appropriate arrow push button on the Mark V, the displayed value on the meter can be increased/decreased, as required, to establish the 100 reference level for the vial of filtered fuel sample in the turbidimeter. The 100 reference level is automatically set on the Mark X.

7.2 Accessory equipment and expendable materials needed to perform the test are shown in **Fig. 3** and consist of the following:

7.2.1 *Syringe Plug (A)*—A plastic plug used to stopper the syringe.

7.2.2 *Syringe Barrel (B) and Syringe Plunger (C)*—A disposable plastic syringe.

7.2.3 *Vials (D)*—25-mm outside diameter vial premarked for proper alignment in the turbidimeter.

7.2.4 *Clear and Bright Coalescer/Filter (E)*⁴—An expendable, precalibrated aluminum coalescer/filter cell with a tapered end to fit the syringe. It is labeled in blue background with black lettering:

Clear and Bright, D4860

7.2.5 *Beaker, catch pan or the plastic container* supplied with each Micro-Separometer can be used to receive the waste fuel during the coalescence period of the test (not shown).

7.3 *New Syringe, Syringe Plug, Test Sample Vial, and Clear and Bright Coalescer/Filter*⁴ are used in each test. These



FIG. 1 Mark V Deluxe Micro-Separometer and Control Panel



FIG. 2 Mark X Micro-Separometer and Control Panel

expendable materials are available in a kit containing supplies for six tests. This kit is termed Micro-Separometer Clear and Bright Six Pack.⁴

7.4 *Sample Container*, cylindrical, wide-mouth, clear-glass, container capable of holding at least 900 mL of fuel. The minimum dimensions of the container shall be 100 mm in

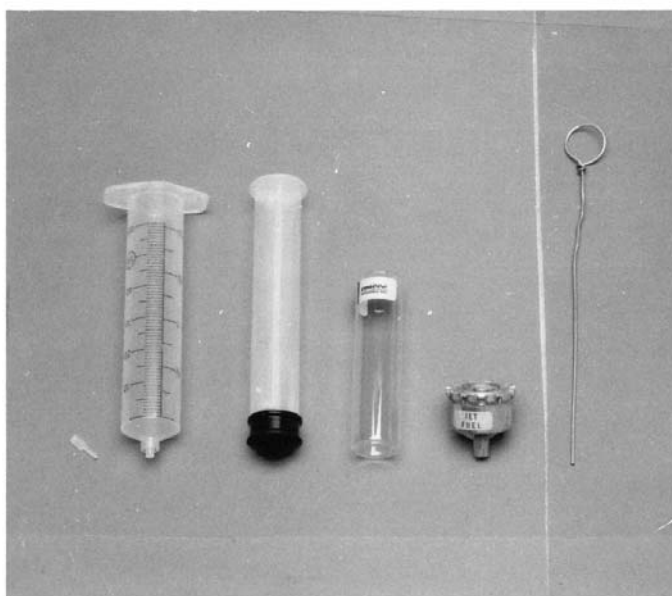


FIG. 3 Test Supplies and Accessory

diameter with a height of 120 mm. The container shall have a lid to seal the contents.

8. Sampling

8.1 Sampling shall be consistent with the procedures of Practice D4057. When practical, take the sample directly into the sample container; however, in some instances the sample can be transferred from the apparatus used to secure the sample to the sample container used in the test.

NOTE 4—Exercise care when transferring a sample from one container to another to ensure the test sample is representative of the fuel source.

8.2 Use the following procedure when the sample is drawn directly into the sample container from a sampling valve:

8.2.1 Be sure the sampling valve is free of loose solid contaminants. If rust or other loose encrustations are present, remove with a cloth; then flush the sampling valve before taking the actual sample.

8.2.2 Rinse a clean sample container thoroughly with the fuel being sampled.

8.2.3 Draw approximately 700 mL of fuel into the sample container (at least $\frac{3}{4}$ full) as rapidly as possible. Use a full flush rather than permitting the fuel sample to trickle out.

8.2.4 A lid must be placed on the container to prevent water absorption or loss from the sample to the ambient environment, especially if the test is performed under different environmental conditions than those of the sample site or at a later time.

9. Preparation of Apparatus

9.1 Locate the Micro-Separometer on a clean workbench in an area in which the temperature is within the operating limits of the instrument, 0 to 50°C.

9.2 Open the case and remove the six-pack box from the lid. Raise the right panel until completely vertical and locked in place. When ac power is available, connect the power cord and turn the instrument on; otherwise operate using battery power.

9.3 Depress the switch (push button) marked *ON*.

NOTE 5—Flickering of the power indicator light during any portion of a test sequence being performed when using battery power indicates that recharging is necessary.

9.4 Have ready a supply of syringes, syringe plugs, vials, and Clear and Bright coalescer/filters. In addition, have the catch pan positioned under the syringe drive mechanism to accept the spent fuel.

10. Conditioning

10.1 Under no circumstances is the test fuel to be prefiltered as filter media can remove the very materials, water and particulate matter, that the test is designed to detect.

10.2 The sample temperature shall not be lower than the temperature at which the fuel will be stored and used. Too low a temperature may cause a haze to form from water previously in solution. When possible, perform the test with the fuel sample at a temperature representing a real-use situation.

11. Procedure

11.1 Visual inspection for water or particulate contamination.

11.1.1 Immediately upon drawing a sample for field testing, check visually for evidence of water or particulate contamination. Hold the sample container up to the ambient light source and view the fuel through the walls of the container, visually examining for haze or lack of clarity. Check the same sample by swirling the fuel in the sample container to produce a vortex. The bottom of the vortex is visually examined for particulate matter. Record the visual clarity as *clear-and-bright* or *not clear-and-bright*. Record if particulate matter or water was or was not viewed at the bottom of the vortex. Cap the container.

11.2 *Numerical Rating of Free Water Using Micro-Separometer:*

11.2.1 Select the *clear-and-bright* test mode. The syringe drive mechanism travels to the *UP* position and the proper syringe drive speed is automatically selected.

11.2.2 *Prepare Fuel Sample:*

11.2.2.1 Remove a plunger from a new 50-mL syringe, insert a plug into the tapered bottom of the syringe, and add 50 ± 1 mL of fuel sample into the barrel of syringe.

11.2.2.2 Insert the plunger in the syringe barrel with the loop end out. (To ensure that only the entrapped air is expelled without fuel loss, the syringe barrel should be cocked at a slight angle.) Insert the plunger to the 50-mL mark on the syringe barrel. Remove the plug from the syringe and replace it with a Clear and Bright coalescer.

11.2.3 *Prepare for Coalescing/Filter Process*—Place the entire syringe assembly into the syringe drive mechanism. Electrically bond the coalescer/filter to the instrument by using the ground lead provided. Insert the end with the banana plug into the receptacle located left of the syringe drive mechanism and attach the alligator clip to one of the coalescer/filter fins. Position a waste container beneath the coalescer/filter (see 7.2.4) to collect the unwanted portion of the processed fuel sample during the coalescing/filtering period of the test (Fig. 4). (**Warning**—Clear and Bright coalescer/filters should be

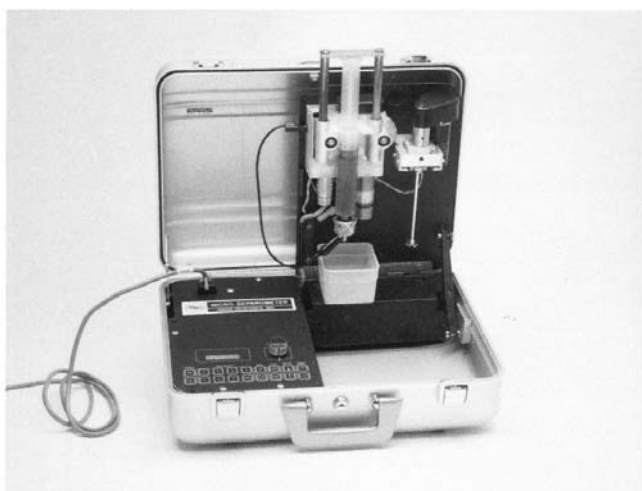


FIG. 4 Syringe Assembly in Syringe Drive

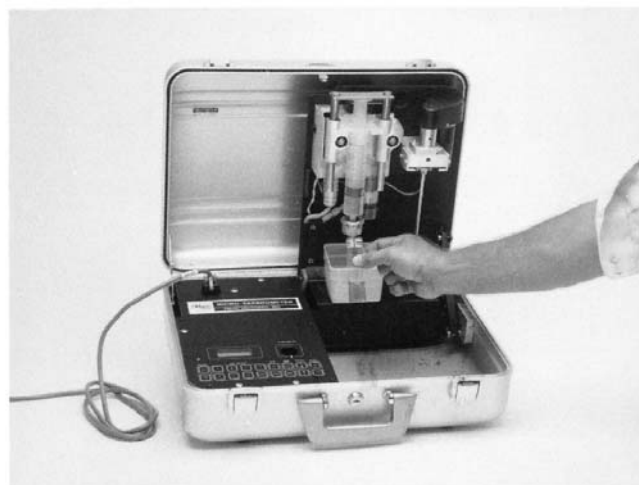


FIG. 5 Taking Sample

electrically bonded to the Micro-Separometer to prevent buildup of an electrostatic charge that could result in ignition of flammable test fluids (Fig. 4.)

11.2.4 *Initiate the Coalescing/Filtering Process:*

11.2.4.1 Depress the START push button which initiates the automatic program (see Table 1). The automatic program is a series of timed events controlled by the instrument that begins with the syringe drive mechanism forcing the fuel through the coalescer/filter.

11.2.4.2 Disregard the first 5 mL of expended fuel and, using a new vial, collect the next 15 mL of fuel sample being processed from the coalescer/filter (Fig. 5). To lessen the amount of air introduced into the fuel during this operation, position the vial at a slight angle and allow the fuel to flow down the inner surface.

11.2.4.3 Wipe the outside of the vial with a clean, lintless wiper to remove fingerprints and fuel. Place the sample vial into the turbidimeter well aligning the marks on the vial with those on the control panel in front of the well.

11.2.5 Adjust the meter to the 100 reference level.

11.2.5.1 A short 4-s tone sounds followed by the meter activating for 10 s. During this period, the meter is adjusted to the 100 reference level by depressing the appropriate arrow

push buttons. At the end of the 10-s period, the meter will deactivate for 30 s. Once the meter deactivates, further adjustment of the meter from this point on through the end of the test is not possible.

11.2.6 *Perform Measurement:*

11.2.6.1 Remove the vial from the turbidimeter well and discard the sample. Half fill the vial with fresh fuel sample that has not been processed (filtered).

11.2.6.2 Wipe the outside of the vial with a clean, lintless wiper to remove fingerprints and fuel. Place the sample vial into the turbidimeter well aligning the marks on the vial with those on the control panel in front of the well.

11.2.7 *Read the MSEP-C&B Rating*—Following the 30-s *METER OFF* period that occurs after the coalescing/filtering process, a 4-s tone sounds and the *METER* automatically activates for a period of 10 s. Mark V Deluxe—During this period, read and record the value displayed on the meter. The Mark X instrument automatically measures the C & B Rating.

12. Report

12.1 Report the results obtained in 11.1.1 regarding the appearance and presence of particulate matter and the value obtained in 11.2.7 as the MSEP-C&B rating.

13. Precision and Bias ⁶

13.1 *Visual Examination for Free Water and Particulate Matter*—It is not practical to specify the precision, and no justifiable statement can be made on the bias of the procedure in this test method since this is a pass/fail test based on a subjective visual examination.

13.2 *Precision*—Numerical rating of free water, as determined by statistical analysis of the test results obtained by twelve operator/instrument pairs on identical fuel samples at a common site is as follows:

TABLE 1 Automatic Program

Operator	Micro-Separometer
Depress <i>START</i> push button	Syringe drive starts down (total start/stop time 45 ± 2 s)
No activity	5 mL of filtered fuel expended
Collect next 15 mL of fuel	Syringe drive continues down
Place vial in turbidimeter	Syringe drive stops
No activity	Pulsed tone for 4 s
Adjust meter to 100	Meter activates for 10 s
No activity	Meter deactivates
Discard fuel and retain vial	No activity for 30 s
Half fill vial with unfiltered fuel	No activity
Place vial in turbidimeter	No activity
No activity	Steady tone for 4 s
Read and record MSEP C&B	Meter activates for 10 s
No activity	Meter deactivates
Discard vial with fuel	End of test sequence

⁶ Supporting data have been filed at ASTM International Headquarters and may be obtained by requesting Research Report D02-1268.

13.2.1 *Repeatability*—The difference between successive measured MSEP–C&B ratings obtained by the same operator with the same Micro-Separator under constant operating conditions on identical material would, in the long run and in the normal and correct operation of the test method, exceed six for only 1 case in 20 (**Note 6**).

13.2.2 *Reproducibility*—The difference between two single and independent measurements of MSEP–C&B ratings by different operator/instrument pairs at the same location on identical material would, in the long run and in the normal and correct operation of the test method, exceed seven for only 1 case in 20 (**Note 6**).

NOTE 6—These results are based on a March 1989 twelve-laboratory cooperative test program using samples specifically prepared for the program. Samples were specifically prepared, since representative samples covering a wide range of level of contaminants were unobtainable from field sources. The repeatability and reproducibility values were estimated from results obtained at the same location and on two consecutive days, by different operator/instrument pairs testing identical samples. Results particularly for reproducibility, obtained at different

times and locations may, therefore, not be comparable according to these estimates, since they may contain errors as a result of sampling, environmental factors, and instability of the contaminants present.

13.2.2.1 In practice, two results obtained at different laboratories (locations) would be acceptable, if their difference did not exceed the published reproducibility. In the event that the difference did exceed the reproducibility, there would be no means of testing, whether the results were acceptable or not. As a practical matter, testing for free water and particulate matter is a real time test, since both contaminants can vary according to changes in the environment, particularly temperature, and time (settling effects).

13.3 *Bias*—The procedure in Test Method D4860 has no bias, because the value of MSEP–C&B ratings is defined only in terms of this test method.

14. Keywords

14.1 clear and bright numerical rating; free water; Micro-Separator; middle distillate fuels; MSEP–C&B rating; particulate contamination

ANNEX

(Mandatory Information)

A1. WARNING STATEMENT

A1.1 Flammable Liquid (general)

Keep away from heat, sparks, and open flame.
Keep container closed.
Use only with adequate ventilation.

Avoid prolonged breathing of vapor or spray mist.
Avoid prolonged or repeated contact with skin.
Spillage and fire instructions will depend on nature of liquid.

SUMMARY OF CHANGES

Subcommittee D02.14 has identified the location of selected changes to this standard since the last issue (D4860–07) that may impact the use of this standard.

(1) Added the Mark X Micro-Separator instrument and information regarding the operation of the Mark X Micro-Separator throughout the standard.

(2) Added new **Fig. 2**.
(3) Added new research report.

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the ASTM website (www.astm.org/COPYRIGHT/).